

CompassPlus[®]

FIXTURE DISINFECTION

QUESTION:

How do I disinfect a CompassPlus[®] fixture?

ANSWER:

First

Place the fixture into the safe cleaning mode by pressing the following:

- + Keypad sequence: (BR, BR, BR, 9, 9, 9)
- + Touchscreen or Touchpad sequence: At the corners of screen, press (TR, TR, TL, BR, 9, 9, 9)

TL = Top Left TR = Top Right
BL = Bottom Left BR = Bottom Right

- + This will prevent unintended requests from being registered in the elevator system.
- + This mode times out after a preset time or it can be cancelled by re-entering the sequences shown above.



**BOTTOM RIGHT
KEY LOCATION (KEYPAD)**



**(TR, TR, TL, BR)
LOCATIONS (TOUCHPAD)**

Second

- + To disinfect the fixture, use a 70% ethyl alcohol solution (ethyl alcohol and distilled water).
- ! Lightly spray a clean, soft cloth with the 70% ethyl alcohol solution and use it to disinfect the fixture surfaces.
- ! Do not overly saturate the cloth.
- ! Do not spray the 70% ethyl alcohol solution directly onto the fixture as this may damage the device electronics.